






RM One Value Monitor fitment guide

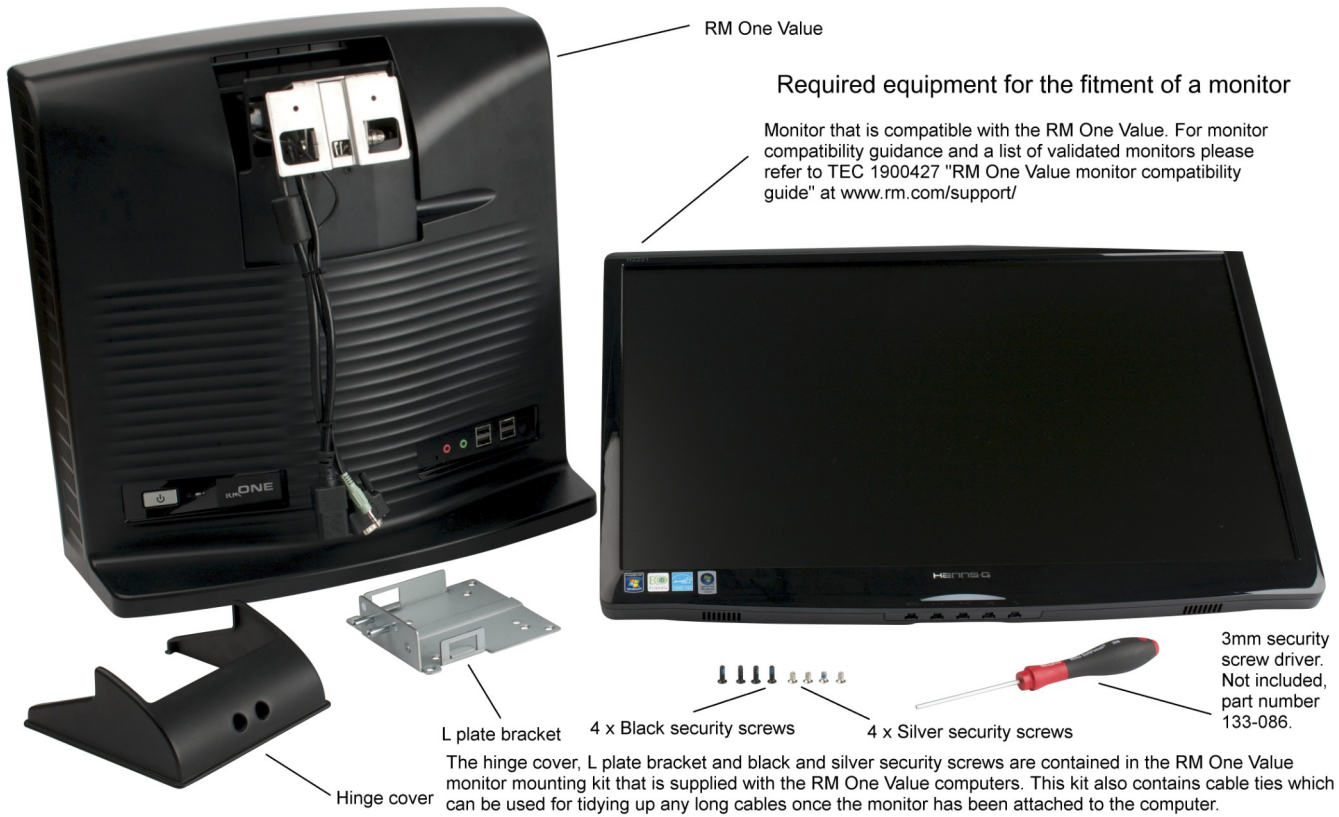

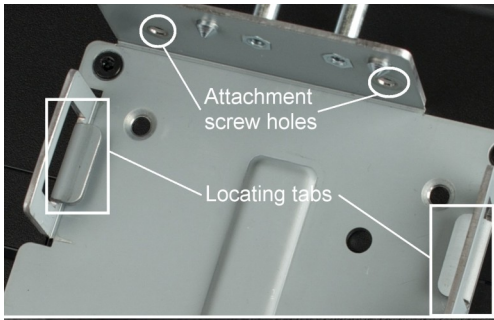

3 Identify the locating tabs and attachment screw holes on the L plate now fitted to the monitor.

5 Place the monitor in front of the case with the back of the monitor facing the case. Lift the monitor up and slide it down onto the case ensuring the edge of the hinge mounting bracket locates into L plate locating tabs. Next fix the L plate to the hinge using two silver security screws through the attachment screw holes.

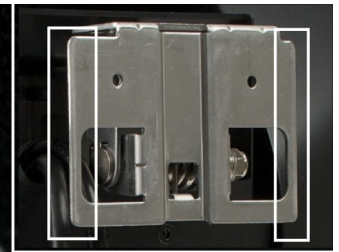

4 Identify the edges of the hinge mounting bracket on the front of the RM One Value.



6 Locate the hinge cover mounting pillars on the top of the L plate



7 Fit the hinge cover over the top of the L plate and hinge ensuring that the holes in the hinge cover are aligned with the holes in the mounting pillars. Fix the cover in place using the two remaining silver security screws



8 Connect the power, VGA and where applicable, the audio cable to the monitor. If necessary use the supplied cable ties to prevent any cables from hanging below the bottom edge of the monitor.



9 Your RM One Value is now assembled and ready to use. For further details on initial set up procedures, please refer to TEC1904048 "RM One Value quick start guide" at www.rm.com/support/